
Quick Release Instructions



The quick release replaces the M12x35 bolt that attaches the rod end bearing to the base swivel and provide a "no tools" way to quickly fold down your Monster Tower with no chance of any

parts being lost.

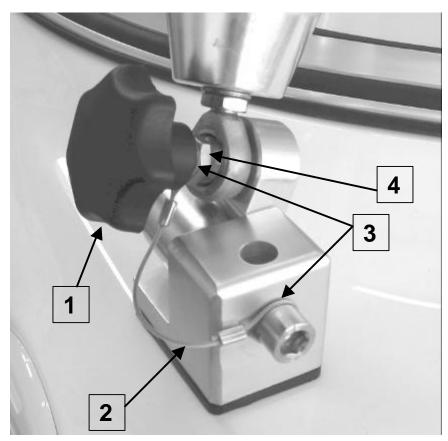

Quick Release Parts List		
Item	Description	Quantity
1	Glass Filled Nylon Knob with M12 Threaded / Zinc Plated Steel Stud	2
2	Coated Stainless Lanyards with Aluminum Loop Lock	2
3	Stainless Steel Lanyard Washers	4
4	M12 Jam Nut	2

To install the quick release remove the M12x85 Bolt and Nylock nut supplied with your Monster Tower that holds the base to the base swivel. Replace the washer at the outside of the base with the lanyard washer as shown. The bolt can go either way so you may have either the bolt head (as shown) or the Nylock nut holding the lanyard washer against the base. Align the base swivel to the rod end bearing and torque the M12x85 Bolt and Nylock nut to 55 ft-lbs.

Remove the M12X35 Bolt that holds the rod end bearing to the base swivel. **Apply a thin film of grease or Anti-Seize** to the threads of item 1 and use the Knob to replace the M12x35 Bolt.

Be careful not to cross thread the stud into the base swivel and keep a light film of grease on the threads to prevent corrosion.